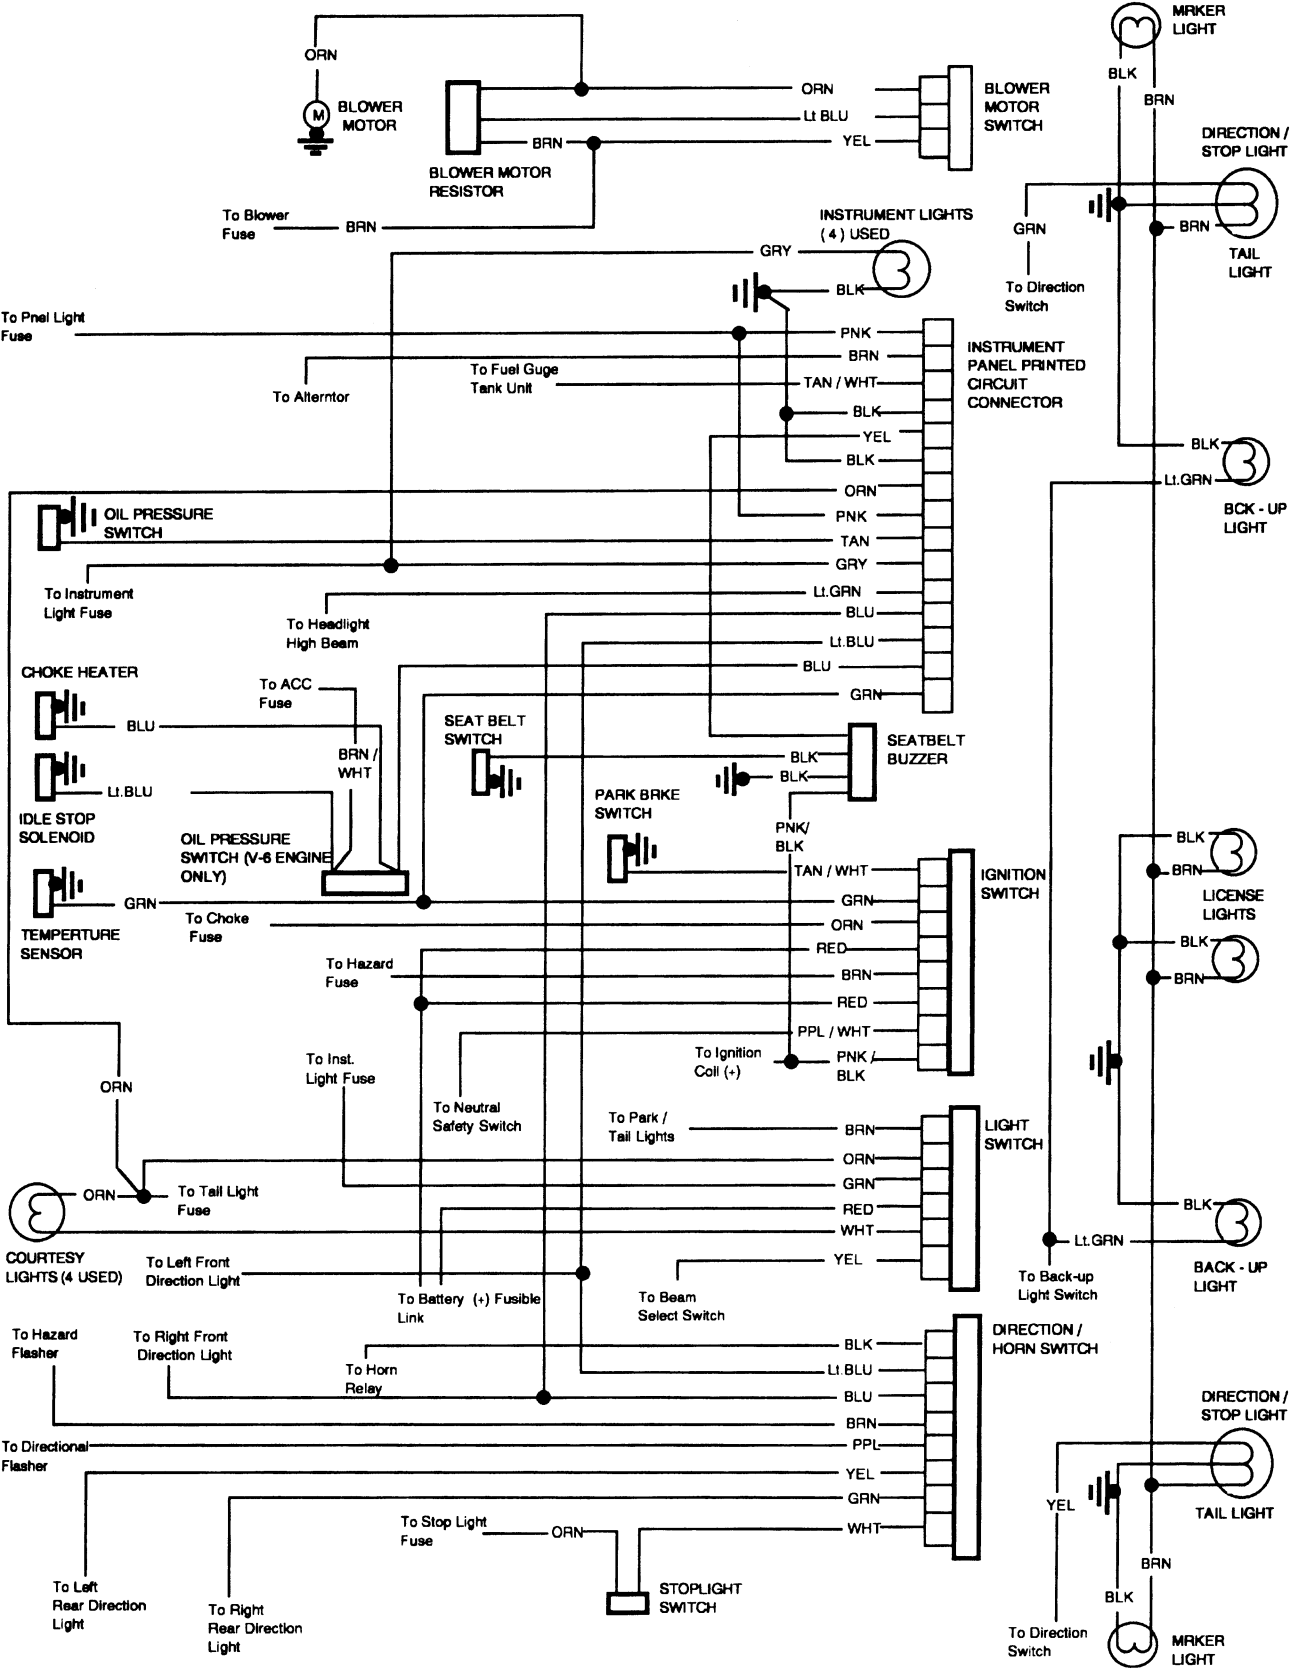
ORN
BLOWER MOTOR
BLOWER MOTOR RESISTOR
To Blower Fuse
BRN
ORN
Lt BLU
YEL
BLOWER MOTOR SWITCH
MRKER LIGHT
BLK
BRN
DIRECTION / STOP LIGHT
GRN
To Direction Switch
BRN
TAIL LIGHT
INSTRUMENT LIGHTS (4) USED
GRY
BLK
To Pnel Light Fuse
To Alterntor
To Fuel Guge Tank Unit
PNK
BRN
TAN / WHT
BLK
YEL
BLK
ORN
PNK
TAN
GRY
Lt.GRN
BLU
Lt.BLU
BLU
GRN
INSTRUMENT PANEL PRINTED CIRCUIT CONNECTOR
BLK
Lt.GRN
BCK - UP LIGHT
OIL PRESSURE SWITCH
To Instrument Light Fuse
To Headlight High Beam
CHOKE HEATER
BLU
Lt.BLU
IDLE STOP SOLENOID
To ACC Fuse
BRN / WHT
OIL PRESSURE SWITCH (V-6 ENGINE ONLY)
GRN
TEMPERTURE SENSOR
To Choke Fuse
SEAT BELT SWITCH
BLK
BLK
SEATBELT BUZZER
PARK BRKE SWITCH
PNK/ BLK
TAN / WHT
GRN
ORN
RED
BRN
RED
PPL / WHT
PNK / BLK
IGNITION SWITCH
To Ignition Coil (+)
BLK
BRN
LICENSE LIGHTS
BLK
BRN
To Hazard Fuse
To Inst. Light Fuse
To Neutral Safety Switch
ORN
ORN
To Tail Light Fuse
COURTESY LIGHTS (4 USED)
To Park / Tail Lights
BRN
ORN
GRN
RED
WHT
YEL
LIGHT SWITCH
To Left Front Direction Light
To Battery (+) Fusible Link
To Beam Select Switch
BLK
Lt.GRN
BACK - UP LIGHT
To Back-up Light Switch
To Hazard Flasher
To Right Front Direction Light
To Horn Relay
BLK
Lt.BLU
BLU
BRN
PPL
YEL
GRN
WHT
DIRECTION / HORN SWITCH
To Directional Flasher
DIRECTION / STOP LIGHT
YEL
TAIL LIGHT
BRN
BLK
To Stop Light Fuse
ORN
STOPLIGHT SWITCH
To Left Rear Direction Light
To Right Rear Direction Light
To Direction Switch
MRKER LIGHT